

Tizu

Assembly Guide



Components


TIZU ships in boxes of two, so all components are x2.

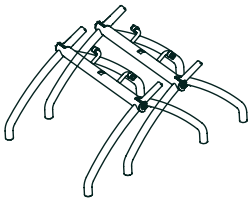


Legs




Backrests

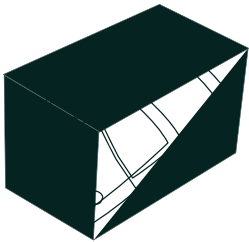


Box A: Seat rest/Arm

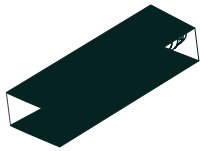

Box B: Castors

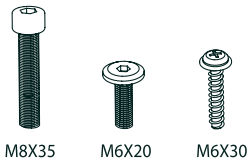

Box C: Hardware

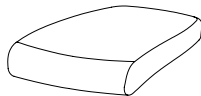

Bag: Seat Cover

Tools Required

Allen Keys: 4mm and 6mm

Phillips Head Screw Driver

Rubber Mallett




Installation

Note: You may choose to start with installing the seat cover – instructions on last page.


Step 1

Insert the castors into bottom of each leg.

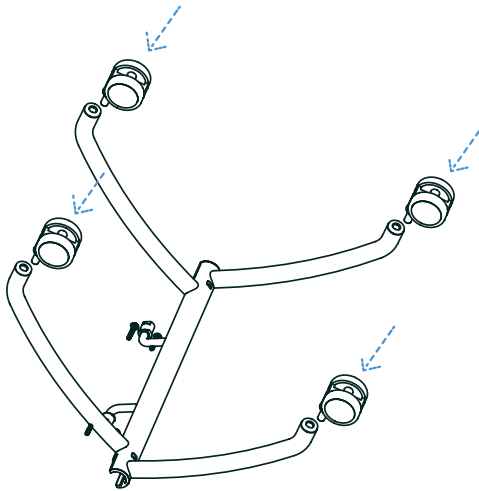


Step 2

Attach the backrest to the top of leg frame.
Gently tap arms into place with mallett.

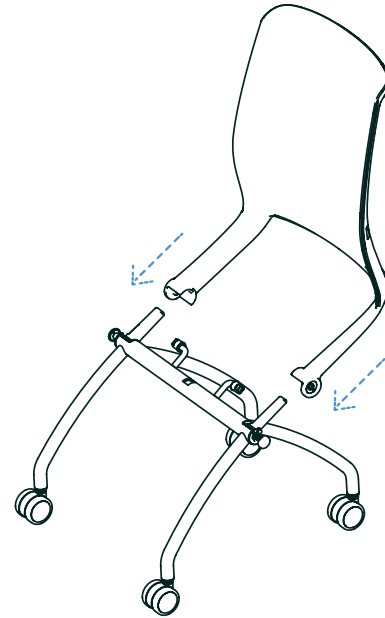


Step 3

1. Using the M6X20 bolts, attach the armrest to the backrest.
2. Using the M8X35 bolts, attach the armrest into the leg assembly.

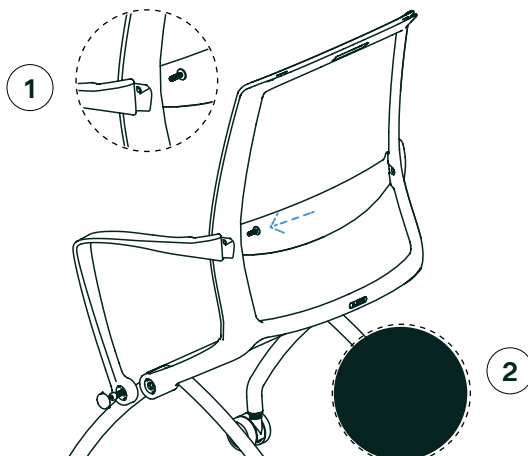

Step 4


Insert bushing into seat bracket, and the seat bracket into cantilever.

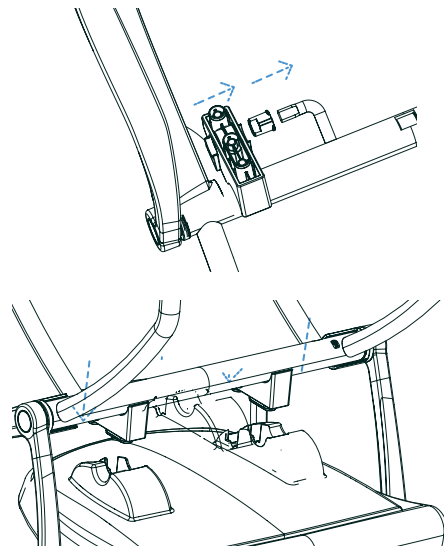

Installation


Step 5

Tighten seat with M6X30 bolts.

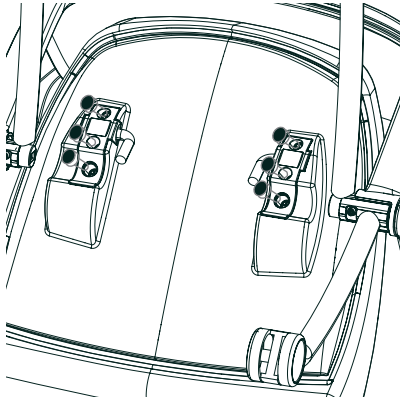

Step 6

Slide in lumbar support piece.

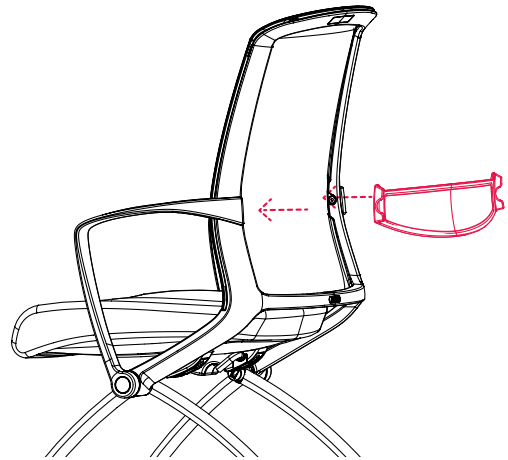

Installing Removable Seat Covers

Step 1

Place seat cover over the seat cushion and seat cover lining that is already in place.



Step 2

Locate the zipper pull and pull around the seat until it meets the other end of the zipper.



Step 3

Once fully zipped, cover is in place.
Push seat down and chair is ready to use.

