



COMPONENTS | Hardware



Ceiling Locator x2



Cable Gripper x2



Bracket Housing x2



Coco

Self Tapping Screw




Inset Screw M6x8 x2




Inset Screw M5x16 x2




COMPONENTS | Felt Screen

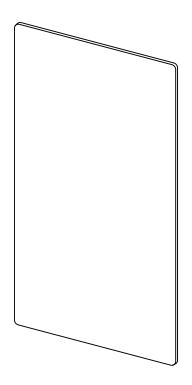

PHASE 1 | Suspension

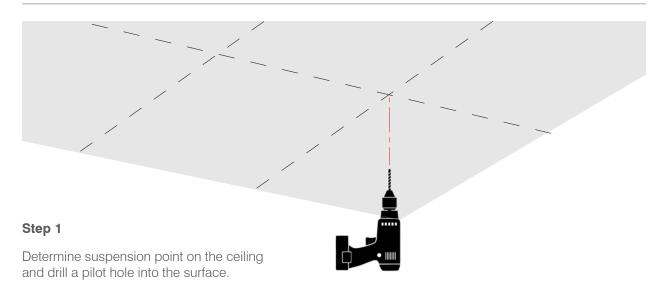

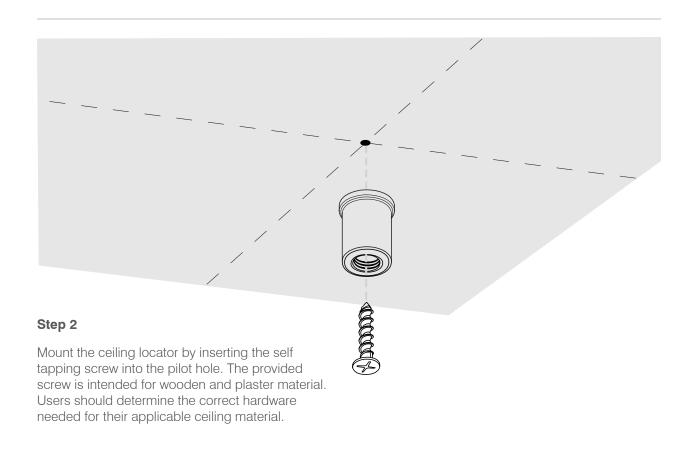


Step 3

Insert the cable into the cable gripper and secure using an M6x8 screw.

locator and tighten by hand only.

however, users may trim to desired length

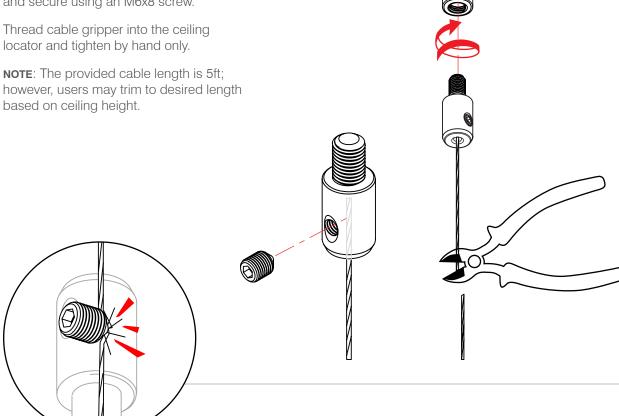




CAUTION: Do not overtighten screw. Overtightening can result in cable thread failure.

Step 4

Insert the other end of the cable into the cable gripper and secure using an M6x8 screw.

Thread cable gripper into the bracket housing and tighten by hand only.


NOTE: Cable grippers are identical and can be used interchangeably between top and bottom assembly.

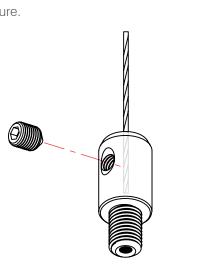





PHASE 1 | Suspension

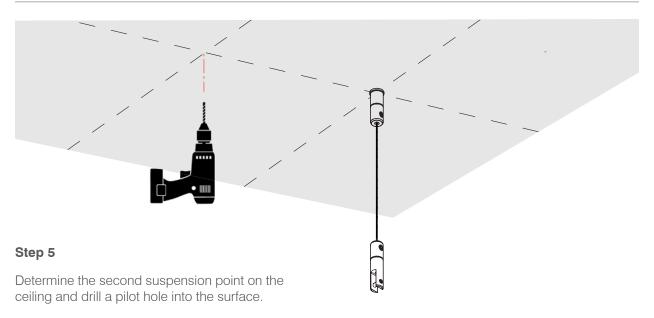


Repeat steps 2-4.

Recommended spacing between ceiling locators:

28" panel: 20" apart 38" panel: 26" apart 48" panel: 36" apart


AMQ

Step 1

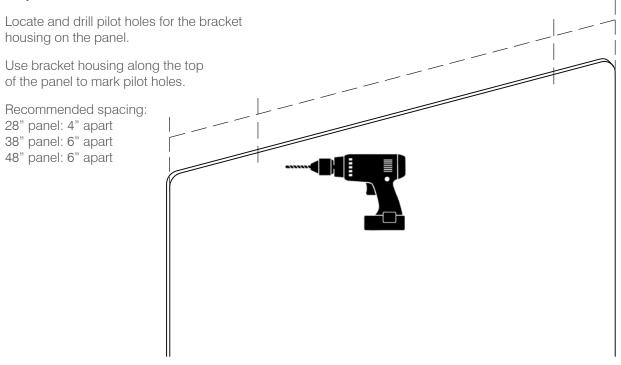

Step 2

Align the bracket housing with the pilot hole in the panel and secure using an M5x16 screw.

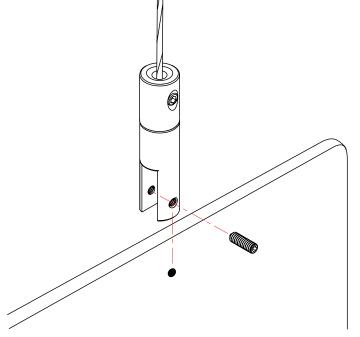




Step 3

Tighten the screw to ensure panel is held in place.

Tighten the screw to ensure the screw goes all the

Tighten the screw to ensure the screw goes all the way through the panel and stays flush

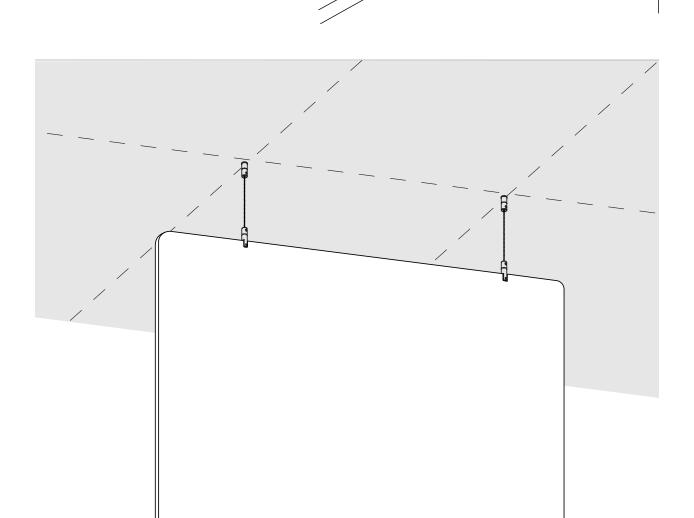

Please contact cc@amqsolutions.com if you are missing any parts, have difficulty with assembly, or have any product related questions.