



TAPE | Placement


Each white rectangle represents a 1" thick strip of double sided tape.
Each shape should require no more than 20" of double sided tape to mount.

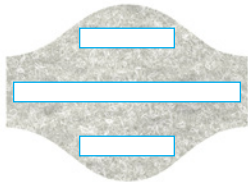

Belt

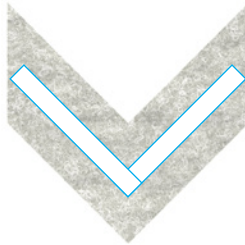


Chevron

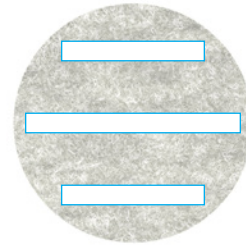


Circle




Dome

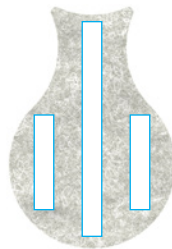


Drop




Stripe

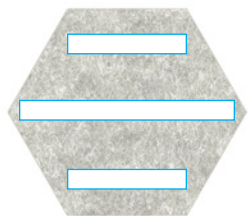


Hexagon

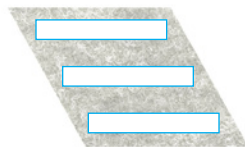


Rhombus

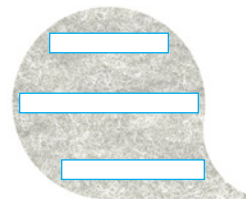


Balloon

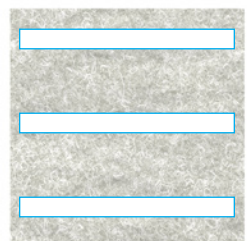


Square



Trapezoid

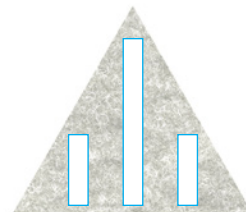

Triangle

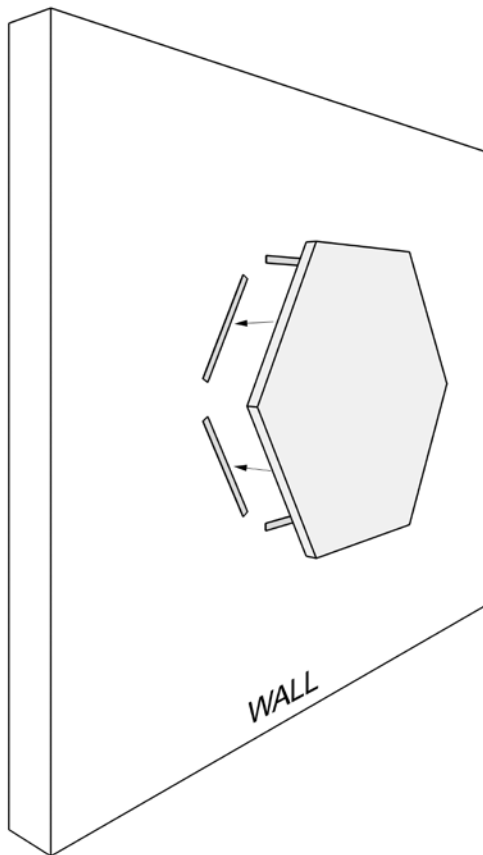

Steps to avoid failure

- Clean the surface and the Wall Tile with a damp cloth to remove any debris. Let dry before installing.
- The double sided tape should be pressed tightly across the entire Wall Tile to press out air bubbles and secure a tight bond.
- There is a tolerance range in the Wall Tiles of 1/16". Plan for a 1/8" gap between Wall Tiles for installation.
- Press each tile firmly against the wall and firmly burnish for 10-15 seconds to secure a tight bond.
- Ensure sufficient pressure is applied during installation. Complete adhesion does not happen without burnishing tape to tile and tape to application surface.
- Wall tiles must be applied to a smooth surface. AMQ does not guarantee wall tile performance on non-smooth surfaces (eg. brick).

Please contact cc@amqsolutions.com if you are missing any parts, have difficulty with assembly, or have any product related questions.