

## ASSEMBLY INSTRUCTIONS

METAL FACING TRUNDLE & HIGH RISER TRUNDLE

### PRE-ASSEMBLY

- ☐ **Please remove staples from the box before removing the bed.** This will reduce the possibility of scratching the bed's finish with the staples.
- ☐ Read all instructions carefully before beginning assembly. Assembly by two people is recommended.
- ☐ Tools required: Philips screwdriver and 7/16" wrench (or adjustable wrench).

### PARTS INCLUDED

- ☐ (1) Siderails 1.5" x 1 x 72¼ **A**
- ☐ (1) Metal Profile Side 1" x 10 x 76 **B**
- ☐ (9) Individual Cross Slats ½ x 1 x 38½ with Hole on Each End **C**
- ☐ (2) Cross Slats ½ x 1 x 38½ with One conjoined Slat with Casters on each end **D**


### HARDWARE PACKET

- ☐ **a** (30) 4" - 20 x 1" Phillips Flathead M/S (Black)
- ☐ **b** (30) 4" - 20 T-nut (Black)

### ASSEMBLY INSTRUCTIONS

- ☐ To attach the Siderail **A** & Cross Slats with Casters **D** to the Siderails **A**, place the Cross Slat beneath the lip of the Side Rail. Attach using a Phillips flathead **a** from above, and a T-Nut **b** from below. See **Figure 4**.
- ☐ Attach the Conjoined Cross Slats with Casters **D** to the second hole from each siderails. Do the same with opposite side. Align each Cross Slat **C** with the holes in the Siderail **Figure 4**. Completed Unit, see **Figure 5**.

**Figure 4**

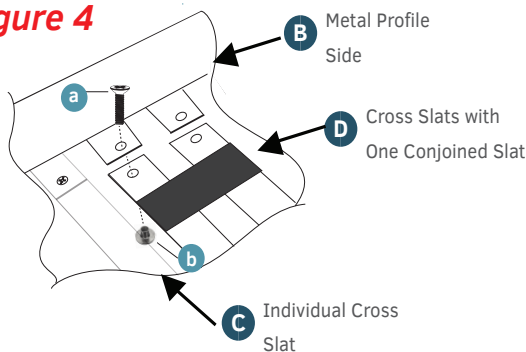

**Figure 5**



**Completed Metal Facing Trundle**

### HIGH RISER INSTRUCTIONS

**Figure 3**

*How to install the High Riser*



### MAINTENANCE

- ☐ Periodically re-tighten all bolts.
- ☐ To clean, wipe with a soft dry or slightly damp cloth. Never use harsh cleaners or abrasives.