

ASSEMBLY INSTRUCTIONS

TRUNDLE & HIGH RISER

PRE-ASSEMBLY

- ☐ **Please remove staples from the box before removing the bed.** This will reduce the possibility of scratching the bed's finish with the staples.
- ☐ Read all instructions carefully before beginning assembly. Assembly by two people is recommended.
- ☐ Tools required: Philips screwdriver and 7/16" wrench (or adjustable wrench).

PARTS INCLUDED

- ☐ (2) Side rails 1.5" x 1 x 72¼ **A**
- ☐ (11) Cross Slats ½ x 1 x 38½ with Hole on Each End **B**
- ☐ (2) Cross Slats ½ x 1 x 38½ with Two Casters on each end **C**

HARDWARE PACKET

- ☐ **a**  (30) 4" - 20 x 1" Phillips Flathead M/S (Black)
- ☐ **b**  (30) 4" - 20 T-nut (Black)

ASSEMBLY INSTRUCTIONS

- ☐ To attach Cross Slats **B** & Cross Slats with Casters **C** to the Side rails **A**, place the Cross Slat above the lip of the Side Rail. Attach
- ☐ using a Phillips flathead **a** from above, and a T-Nut **b** from below. See **Figure 1**.
- ☐ Attach Cross Slats with Casters **C** to the third hole from each side rails. Do the same with opposite side. Align each Cross Slat **B** with the holes in the Side rail **Figure 1**. Completed Unit, see **Figure 2**.

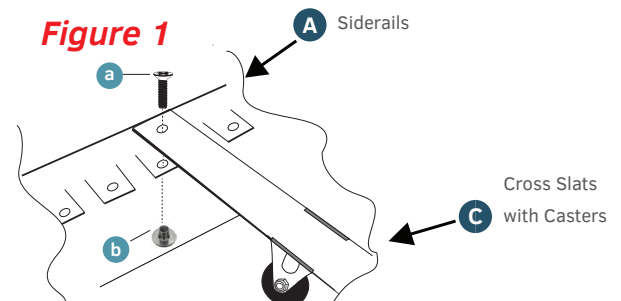


Figure 2

Completed Trundle

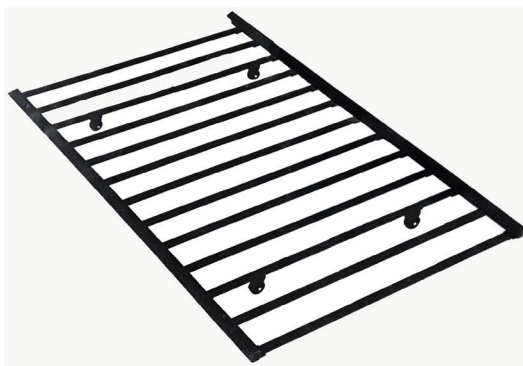


Figure 3

How to install the High Riser



MAINTENANCE

- ☐ Periodically re-tighten all bolts.
- ☐ To clean, wipe with a soft dry or slightly damp cloth. Never use harsh cleaners or abrasives.