

ASSEMBLY INSTRUCTIONS

METAL FACING TRUNDLE & HIGH RISER

PRE-ASSEMBLY

- ☐ **Please remove staples from the box before removing the bed.** This will reduce the possibility of scratching the bed's finish with the staples.
- ☐ Read all instructions carefully before beginning assembly. Assembly by two people is recommended.
- ☐ Tools required: Philips screwdriver and 7/16" wrench (or adjustable wrench).

PARTS INCLUDED

HARDWARE PACKET

- ☐ (1) Side rails 1.5" x 1 x 72 1/4" **A**
- ☐ (1) Metal Profile Side 1" x 10 x 76" **B**
- ☐ (9) Individual Cross Slats 1/2 x 1 x 38 1/2" with Hole on Each End **C**
- ☐ (2) Cross Slats 1/2 x 1 x 38 1/2" with One conjoined Slat with Casters on each end **D**

- ☐ **a**  (30) 4" - 20 x 1" Phillips Flathead M/S (Black)
- ☐ **b**  (30) 4" - 20 T-nut (Black)

ASSEMBLY INSTRUCTIONS

- ☐ To attach the Side rail **A** & Cross Slats with Casters **D** to the Side rails **A**, place the Cross Slat beneath the lip of the Side Rail. Attach using a Phillips flathead **a** from above, and a T-Nut **b** from below. See **Figure 4**.
- ☐ Attach the Conjoined Cross Slats with Casters **D** to the second hole from each side rails. Do the same with opposite side. Align each Cross Slat **C** with the holes in the Side rail **Figure 4**. Completed Unit, see **Figure 5**.

Figure 4

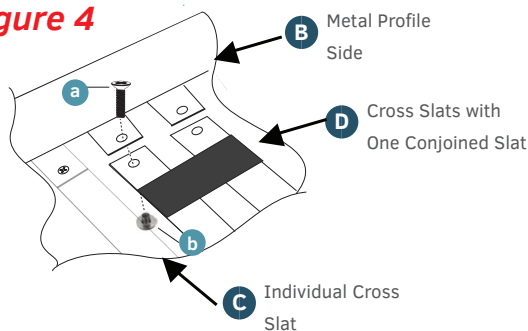


Figure 5



Completed Metal Facing Trundle

HIGH RISER TRUNDLE INSTRUCTIONS

Figure 3

How to install the High Riser Trundle



MAINTENANCE

- ☐ Periodically re-tighten all bolts.
- ☐ To clean, wipe with a soft dry or slightly damp cloth. Never use harsh cleaners or abrasives.