

ASSEMBLY INSTRUCTIONS

COMPLETE BED W/METAL PROFILE (CB-MPF)





PRE-ASSEMBLY

- ☐ **Please remove staples from the box before removing the bed.** This will reduce the possibility of scratching the bed's finish with the staples.
- ☐ Read all instructions carefully before beginning assembly. Assembly by two people is recommended.
- ☐ Tools required: Philips screwdriver and 7/16" wrench (or adjustable wrench).

PARTS INCLUDED

- ☐ (1) Headboard
- ☐ (1) Footboard
- ☐ (2) Metal Profile (Siderails) **A**
- ☐ (3) Cross Slats w/ 3 V-Shaped Support (Double size) **B**
- ☐ (3) Cross Slats w/ 5 V-Shaped Support (Queen & King size)

HARDWARE PACKET

- ☐ **a**  (8) 1/4" - 20 x 1" Hex Bolts
- ☐ **b**  (8) 1/4" - 20 x 3/4" Flathead Bolts
- ☐ **c**  (8) 1/4" Flat Washers
- ☐ **d**  (8) 1/4" - 20 Serrated Nuts

ASSEMBLY INSTRUCTIONS

- ☐ Determine the location for the bed, and place Headboard in an upright position.
- ☐ Lift Siderail **A** and align with the holes at the base of the Headboard. See **Figure 1**.
- ☐ Attach the Siderails **A** to the Headboard using the Hex Bolts and Flat Washers, **a** and **c**. Hand-tighten only at this stage.
- ☐ Repeat for the Footboard.

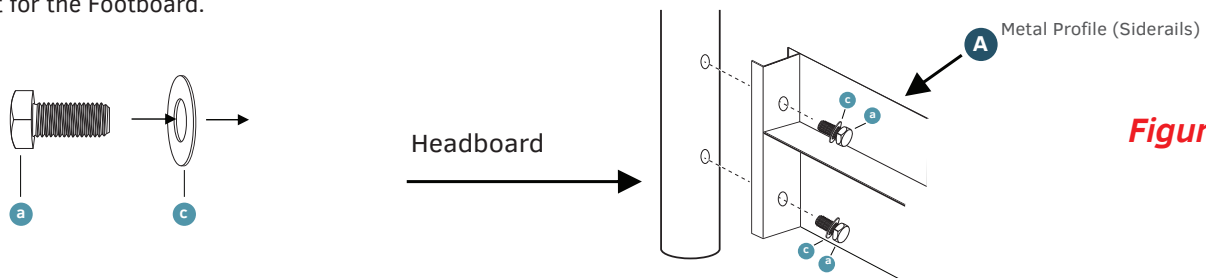


Figure 1

- ☐ To attach Cross Slats **B** to the Siderails **A**, place the Cross Slat beneath the lip of the Side Rail.
- ☐ Align the Cross Slat **B** with the holes in the Siderail. Attach using a flathead Bolt **b** from above, and a Serrated Nut **d** from below. See **Figure 2**.
- ☐ Note: Fully tighten all bolts. Do not over-tighten, as that could damage the screw threads.

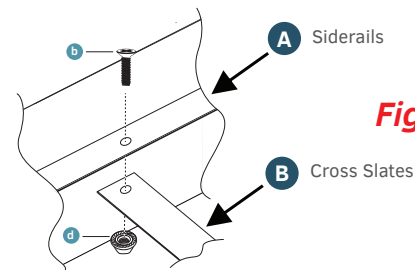


Figure 2

- ☐ See **Figure 3** for order of cross slats in size Double. See **Figure 4** for order of cross slats in a size Queen & King.

Figure 3



Figure 4



MAINTENANCE

- ☐ Periodically re-tighten all bolts.
- ☐ To clean, wipe with a soft dry or slightly damp cloth. Never use harsh cleaners or abrasives.