

ASSEMBLY INSTRUCTIONS

HEADBOARD WITH METAL SURROUND, HEADBOARD WITH METAL SURROUND & PLATFORM (WOOD SLATS)
(HB-MS, HB-MS-WS)

PRE-ASSEMBLY

- ☐ **Please remove staples from the box before removing the bed.** This will reduce the possibility of scratching the bed's finish with the staples.
- ☐ Read all instructions carefully before beginning assembly. Assembly by two people is recommended.
- ☐ Tools required: Philips screwdriver and 7/16" wrench (or adjustable wrench).

PARTS INCLUDED

- ☐ (1) Headboard
- ☐ (1) Footboard
- ☐ (2) Metal Siderails **A**
- ☐ (3) Cross Support Rails **B**
- ☐ (4) 1/4" - 20 x 1" Hex Bolts attached to HB
- ☐ (1) Cross Support Rails with 3 supports (Center Cross Support)

For Platform (Wood Slats) **a*




- ☐ (2) Metal Cross Slats **For Platform (Wood Slats)*

HARDWARE PACKET


- ☐ **a**  (10) 1/4" - 20 x 1"-Hex Bolts
- ☐ **b**  (7) 1/4" - 20 x 3/4" Flathead Bolts
- ☐ **c**  (7) 1/4" - 20 Hex Nut

ASSEMBLY INSTRUCTIONS

- ☐ Determine the location for the bed, and place Headboard in an upright position.
- ☐ Lift Siderail **A** and align with the holes at the base of the Headboard. See **Figure 1** (for HB-MS-WS) or **Figure 2** (for HB-MS)
- ☐ Attach the Siderails **A** to the Headboard using the Hex Bolts **a**. Hand-tighten only at this stage.
- ☐ For Footboard clip the sides together. See **Figure 3**

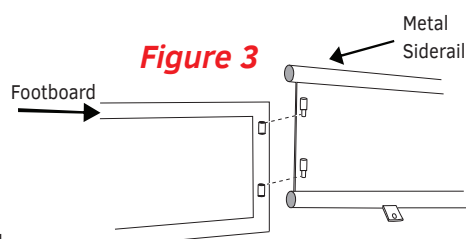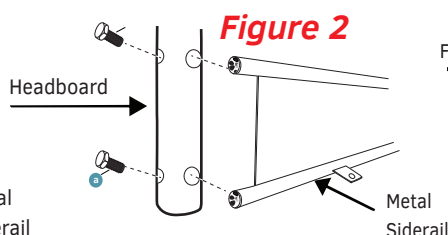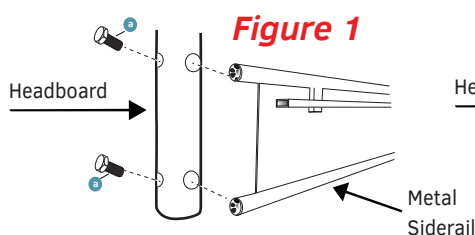

- ☐ To attach Cross Support Rail **B** to the Siderails **A**, place the Cross Support Rail beneath the lip of the Side Rail.
- ☐ Align the Cross Support Rail **B** with the holes in the Siderail. Attach using a flathead Bolt **b** from above, and a Serrated Nut **c** from below. See **Figure 4**.
- ☐ Note: Fully tighten all bolts. Do not over-tighten, as that could damage the screw threads.

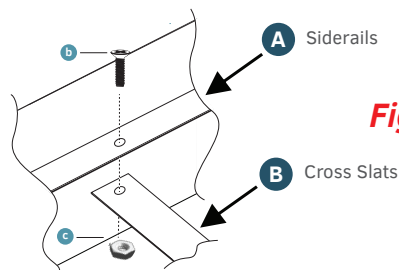

How to install the platform (wood slats)

FOUR EASY STEPS



STEP 1

Place platform (wood slats) on top of the bed's base and screw the bolt and washer on the center top (as shown in the top right image)



STEP 2

Unroll the platform (wood slats) away from the headboard and fold half way



STEP 3

Unroll the other half towards the footboard stretch the rest of the platform (wood slats) towards the footboard

STEP 4

Screw in the bolt and washer to the bottom of the platform (wood slats) (as shown in the top image)

MAINTENANCE

- ☐ Periodically re-tighten all bolts.
- ☐ To clean, wipe with a soft dry or slightly damp cloth. Never use harsh cleaners or abrasives.