


INSTALLATION GUIDE FOR NC MX-5 MIATA

Tools needed:

Pop clip removal tool

Philips head screwdriver

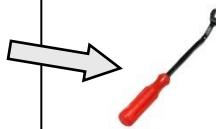

FRONT GUARDS

1. Turn the steering wheel to one side. You will install the guard on this side first (turn right to install the right front guard).
2. Remove the lowest three pop clips with a flat head screwdriver or removal tool. The OEM clips can be reused, but we include new ones.
3. Align the guard with the holes and replace the clips without fastening fully. Adjust the guard for desired fitment, then push the pop clips fully into place. The top clip will be difficult to pop back in!



Wheel turned for fender liner hardware access

REAR GUARDS

1. Clean the orange area thoroughly with the included alcohol pads where the 3M VHB tape attaches to the fender liner. Remove ALL dirt and debris.
2. Check guard alignment: the edge of the 3M tape is designed to follow the bumper edge. The inside edge of the guard is also cut to follow the fender liner.
3. Prep the orange area with an adhesion promoter pad. Remove the tape backing and install the guard carefully, adjusting it as needed before pressing FIRMLY to set the tape. Enjoy!

