

FRONT AND REAR TOW HOOKS 29-9900X




Thanks for purchasing our Tow Hooks. If you have any questions during installation or suggestions for improvement to the product or the instructions - please don't hesitate to call or email.

WARNING: Not everyone can perform every installation. It is critical that you be honest with yourself in regards to your ability. We're more than happy to help, but there are only so many things we can do from the other end of a phone / computer. If in doubt, discuss the install with us before you dive in. Improper installation could cause injury and / or death!

Required tools:

- Metric socket set

1. The front tow hook (29-99002) installs in place of the original tie-down points ("baby teeth"). This goes on the passenger side only. Remove the three bolts holding them in place (arrow 1, plus one that's hidden), and bolt this tow hook/eye in its place. If the bolts are missing, use M10x1.25x30 bolts. Be aware that the tow hook doesn't deal well with upward forces, so depending on how the car is towed the hook may need to be replaced after use.

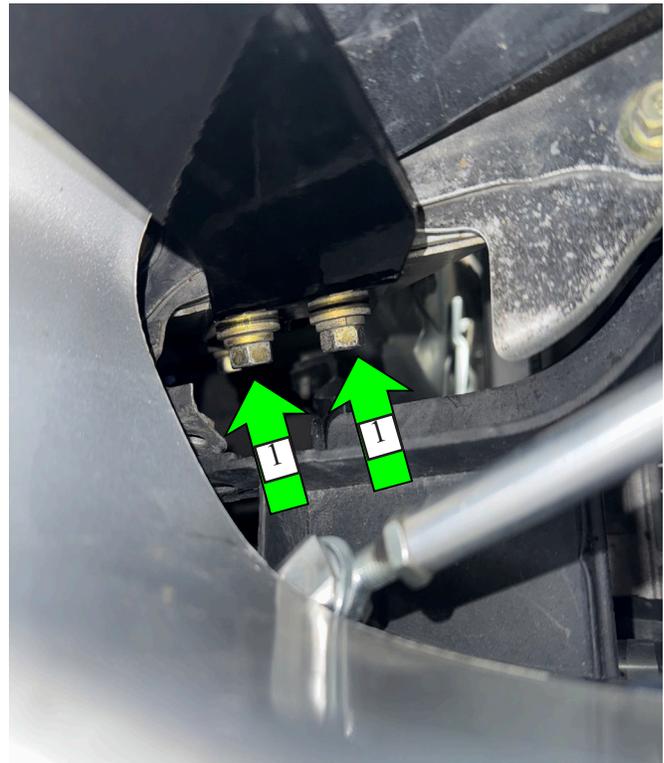

2. The rear hook (29-99003) installs in the same manner, replacing the right rear tie down point (it won't work on the left side). The rear hook isn't indestructible, but it's stronger than the front hook. The rear hook only works for 1990-1997 cars.

