


NOTES:

1. DIVERSION TO BE USED UPSLOPE OF A CONSTRUCTION SITE TO PREVENT STORM RUNOFF FROM ENTERING THE DISTURBED AREA.
2. IMMEDIATELY LINE AND STABILIZE BEFORE ANY DOWNSLOPE GRADING BEGINS (STABILIZATION METHOD IS BASED ON VELOCITY OF OFFSITE DRAINAGE).
3. DIVERSIONS SHOULD ONLY BE USED FOR DRAINAGES 5 ACRES OR LESS.
4. ANY SEDIMENT LADEN WATER PRIOR TO STABILIZATION OF THE DIVERSION MUST BE DIVERTED INTO AN APPROVED EROSION AND SEDIMENT CONTROL BMP. CLEAN WATER SHOULD EMPTY INTO AN APPROVED OUTLET DEVICE.

MAINTENANCE NOTES:

1. INSPECT AFTER EVERY RAINFALL DURING THE CONSTRUCTION OPERATION.
2. IMMEDIATELY REMOVE ANY OBSTRUCTIONS FROM THE FLOW AREA, AND REPAIR DIVERSION RIDGE.
3. CHECK OUTLETS AND MAKE TIMELY REPAIRS AS NEEDED.
4. MAINTAIN THE VEGETATION IN A VIGOROUS, HEALTHY CONDITION AT ALL TIMES.

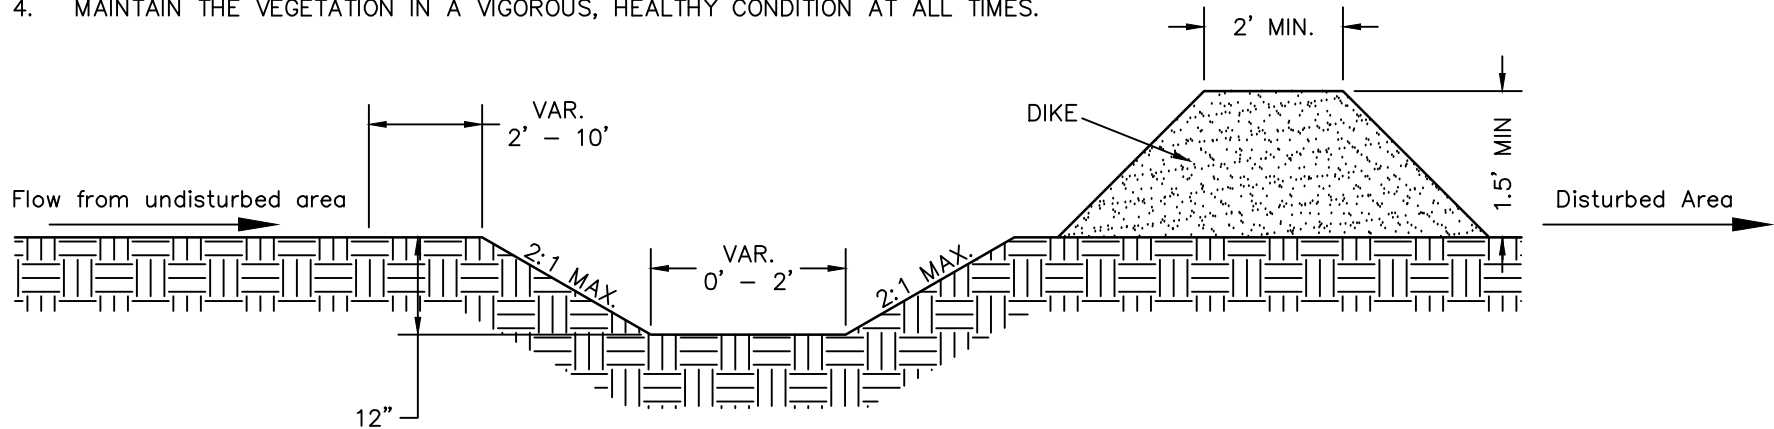

CROSS SECTIONAL VIEW

STANDARD CLEAN WATER DIVERSION

